

LUFT/VATTENVÄRMEPUMPAR • AIR-TO-WATER HEAT PUMPS

Värmepump Heat pump	Styrenhet Control unit	CTC EcoZenith i250	CTC EcoZenith i350	CTC EcoVent i350F	CTC EcoZenith i550 Pro	CTC EcoLogic Pro/Family	CTC EcoPart Pro (i425/i430/i435)	CTC Basicstyrning
CTC EcoAir 406 1x230V		x	x	x	x	x	x	x
CTC EcoAir 406 3x400V		x	x	x	x	x	x	x
CTC EcoAir 408 1x230V		x	x	x	x	x	x	x
CTC EcoAir 408 3x400V		x	x	x	x	x	x	x
CTC EcoAir 410 1x230V		x			x	x	x	x
CTC EcoAir 410 3x400V		x			x	x	x	x
CTC EcoAir 415 1x230V					x	x	x	x
CTC EcoAir 415 3x400V					x	x	x	x
CTC EcoAir 420 1x230V					x	x	x	x
CTC EcoAir 420 3x400V					x	x	x	x
CTC EcoAir 510M 1x230V		x	x	x		x		
CTC EcoAir 510M 3x400V		x	x	x				
CTC EcoAir 520M 3x400V		x	x	x	x	x		
CTC EcoAir 610M 3x400V		x	x	x		x		
CTC EcoAir 614M 3x400V		x	x	x	x	x		
CTC EcoAir 622M 3x400V		x	x	x	x	x		

BERGVÄRMEPUMPAR • GROUND SOURCE HEAT PUMPS

Värmepump Heat pump	Styrenhet Control unit	CTC EcoZenith i250	CTC EcoZenith i350	CTC EcoVent i350F	CTC EcoZenith i550 Pro	CTC EcoLogic Pro/Family	CTC EcoPart Pro (i425/i430/i435)	CTC Basicstyrning
CTC EcoPart 406 1x230V		x	x	x	x	x	x	x
CTC EcoPart 406 3x400V		x	x	x	x	x	x	x
CTC EcoPart 408 1x230V		x	x	x	x	x	x	x
CTC EcoPart 408 3x400V		x	x	x	x	x	x	x
CTC EcoPart 410 1x230V		x	x	x	x	x	x	x
CTC EcoPart 410 3x400V		x	x	x	x	x	x	x
CTC EcoPart 412 1x230V		x	x	x	x	x	x	x
CTC EcoPart 412 3x400V		x	x	x	x	x	x	x
CTC EcoPart 414 1x230V					x	x	x	x
CTC EcoPart 414 3x400V					x	x	x	x
CTC EcoPart 417 1x230V					x	x	x	x
CTC EcoPart 417 3x400V					x	x	x	x
CTC EcoPart 425 Basic 1x230V					x	x	x	
CTC EcoPart 425 Basic 3x400V					x	x	x	
CTC EcoPart 430 Basic 1x230V					x	x	x	
CTC EcoPart 430 Basic 3x400V					x	x	x	
CTC EcoPart 435 Basic 1x230V					x	x	x	
CTC EcoPart 435 Basic 3x400V					x	x	x	

Styrenheten kan styra: The controller can control:	Antal värmepumpar: Number of heat pumps:
CTC EcoZenith i250	1
CTC EcoZenith i350	1
CTC EcoVent i350F	1
CTC EcoZenith i550 Pro	3
CTC EcoLogic Pro/Family	10
CTC EcoPart Pro *	10
CTC Basicstyrning	1

* 1 Pro/Basic = 2 värmepumpar/heat pumps